



Quick Installation Guide

Magnetic Stripe Reader for 1517/1717L LCD Desktop

© 2012 Elo Touch Solutions, Inc. All rights reserved.



www.elotouch.com



Revision A
P/N E110595

North America
Elo Touch Solutions
301 Constitution Drive
Menlo Park, CA 94025

Tel 800-ELO TOUCH
Tel 1-650-361-4800
Fax 1-650-361-4722
customerservice@elotouch.com

Europe
Tel +32 (0)16 35 21 00
Fax +32 (0)16 35 21 01
elosales@elotouch.com

Asia-Pacific
Tel +81 (45) 478-2161
Fax +81 (45) 478-2180
www.tps.co.jp

Latin America
Tel 786-923-0251
Fax 305-931-0124
www.elotouch.com.ar

For current Elo news, product updates and announcements, register to receive our TouchMonitor newsletter at www.elotouch.com/go/news

elo TOUCH
SOLUTIONS

Magnetic Stripe Reader (MSR)

Installation Instructions

1



Open the box containing the MSR kit.

2



Verify kit contents:

- ▶ MSR device with USB cable (1)
- ▶ Mounting screws (2)
- ▶ TouchTools Driver software CD (1)
- ▶ Mylar screw cover (2)

3



Place monitor face down on a clean, soft and smooth surface and remove peripheral cover.

4




Align and insert mounting screws into holes and tighten using a Philips screwdriver.

5



Install mylar screw cover.

6

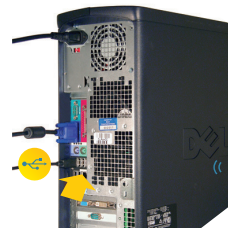

Attach USB cable from MSR device to the USB port on the rear of the computer.

7



Turn on power to the computer.