



www.elotouch.com

Quick Installation Guide

LCD Touchmonitor

Elo Touch Solutions Technical Support

Online self-help:
www.elotouch.com/support

North America

800-ELO-TOUCH
Tel +1 408 597 8000
Fax +1 408 597 8050
EloSales.NA@elotouch.com

Europe

Tel +32 (0)16 70 45 00
Fax +32 (0)16 70 45 49
elosales@elotouch.com

Asia-Pacific

Tel +86 (21) 3329 1385
Fax +86 (21) 3329 1400
EloAsia@elotouch.com

Latin America

Tel +54 11 4785-9129
EloSales.LATAM@elotouch.com

Revision L
P/N E893866

The information in this document is subject to change without notice. Elo Touch Solutions, Inc. and its Affiliates (collectively "Elo") makes no representations or warranties with respect to the contents herein, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose. Elo reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Elo to notify any person of such revisions or changes.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, including, but not limited to, electronic, magnetic, optical, chemical, manual, or otherwise without prior written permission of Elo Touch Solutions, Inc.

Elo (logo) and Elo Touch Solutions are trademarks of Elo and its Affiliates.




Go to www.elotouch.com/support to download user manual.
请访问 www.elotouch.com.cn 获取用户手册 请保留备用


1 - Power



4 - OSD Remote (if applicable)

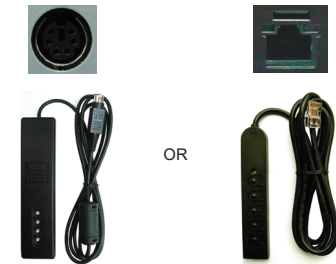

2 - Video

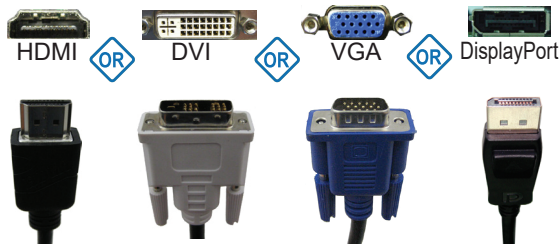

In order to prevent image retention (aka: image sticking, or image burn-in), please use a dynamically changing screensaver or turn off the display when not in use.
Note: Image retention is not covered by your warranty.

No touch driver installation needed
Aucune installation de pilote nécessaire tactile
No hay instalaciones de controlador toque necesario
Kein Touch-Treiber-Installationen notwendig
Nessun driver installazioni tocco necessario

3 - Touch



Не прикасаться установок драйвера необходимы
タッチドライバをインストール不要
不需安裝觸摸☒☒程序
不需安裝觸控驅動程式
필요 없음 터치 드라이버 설치 없음