

MS282e


2D Imager Barcode Scanner

Quick Start Guide



Connecting the Scanner

Connect USB cable to the USB port of a host PC.

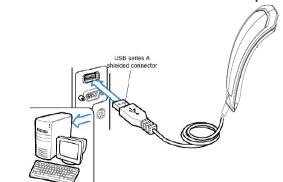

Barcode Programming

Before starting scanning any setting barcode, please do follow the instruction below.

Scanning the Enter Setup barcode can enable the engine to enter the setup mode. Then you can scan a number of programming barcodes to configure your engine. To exit the setup mode, scan the Exit Setup barcode.

Enter Setup



Exit Setup *



Factory Default



Product Information



USB Device Type

USB HID-KBW



USB COM Port Emulation



USB HID-POS



Aiming On /Off

Normal *





Always On



Scan Mode

Continuous Mode

Trigger mode*



Pulse Mode



Sense Mode





Batch Mode



Trigger Mode: A trigger pull activates a decode session.

Sense Mode: The engine activates a decode session every time it detects a barcode presented to it.

Continuous Mode: The engine automatically starts one decode session after another.

Pulse Mode: When the trigger is pulled and released, scanning is activated until a barcode is decoded or the decode session timeout expires.

Batch Mode: A trigger pull activates a round of multiple decode sessions. This round of multiple scans continues until you release the trigger. Rereading the same barcode is not allowed in the same round.

Enable/Disable All Prefixes/Suffixes

Enable All Prefixes/Suffixes



Disable All Prefixes/Suffixes



Good Read LED

Good Read LED ON *



Good Read LED OFF





MS282e

2D Imager Barcode Scanner

Quick Start Guide

Good Read Beep

Good Read Beep On for Non-programming Barcode *



Good Read Beep Off for Non-programming Barcode



Beeper Volume

Low Volume



Medium Volume



High Volume*



Good Read Beep Frequency

Low Tone

Extra Low Tone





Medium Tone*



High Tone



USB Country Keyboard Types

Finland

Turkey_Q

United States*





Japan



France



Turkey_F



Italy





Norway



Spain

Denmark



Austria, Germany



Belgium



Russia



Sweden



Portugal

