




## Connecting the Scanner

Connect USB cable to the USB port of a host PC.

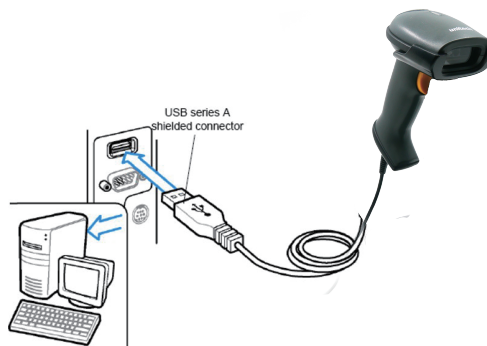

## Data Interface

USB Keyboard\*



USB Virtual Com



RS-232



## Factory Default



## Terminal Character

CR/LF\*



None



TAB



LF



Enter



## Display Version



## QR Url Barcode Output

ON



OFF\*



## Convert Case

Original Data\*



All Convert to Upper Case



Case Inversion



All Convert to Lower case



## Scan Mode

Trigger Mode \*



Presentation Mode



## Baud Rate

38400



9600\*



19200



57600



4800



115200



\* : Default Option

Thank you for purchasing the unitech product.  
For other product documentation, please scan the QR code for more information.



## Beeper Volume

High\*



Low



## Successful Decode Prompt Tone Setting

ON\*



OFF



## Successful Decode Prompt Audio Frequency Setting (Tone)

1\*



3



2



Custom




## USB Keyboard Transfer Speed

Medium



High

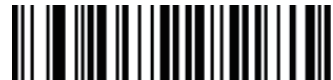

Low\*



Custom Sending Speed  
(2ms ~ 50ms)



## Language

US English\*



Spanish



Turkey Q



UK English



French



Portugal



Arabic



Russia



Italian



German



Belgian



Swedish



Finland



Japanese



## Data bit, Stop bit, Parity bit

7 bit, 1 stop bit, no parity



8 bit, 1 stop bit, no parity\*



7 bit, 1 stop bit, even parity



8 bit, 1 stop bit, even parity



7 bit, 1 stop bit, odd parity



8 bit, 1 stop bit, odd parity



7 bit, 2 stop bit, no parity



8 bit, 2 stop bit, no parity



7 bit, 2 stop bit, even parity



8 bit, 2 stop bit, even parity



7 bit, 2 stop bit, odd parity



8 bit, 2 stop bit, odd parity



\* : Default Option

Thank you for purchasing the unitech product.  
For other product documentation, please scan the QR code for more information.

