

PA768 Series

Rugged Touch Computer



Quick Start Guide

401665G V1.4

► Package

Please make sure the following contents are in the PA768 gift box.
If something is missing or damaged, please contact your Unitech representative.

► The Package Contents

- PA768 Terminal
- Battery
- Hand Strap
- USB 3.0 Type-C Cable
- Quick Start Guide

► Optional Accessories

- Quick charge adaptor
- 9H glass screen protector
- Stylus with coil strap
- Standard/UHF gun grip
- 1-Slot USB cradle
- 1-Slot Charging cradle
- 1-Slot Ethernet cradle

► Product View



- | | |
|---------------------------|------------------------|
| 1. Barcode Scanner Window | 6. Scanner Trigger Key |
| 2. Receiver | 7. Power Key |
| 3. LED Indicator | 8. Programmable Key |
| 4. Front Camera | 9. Scanner Trigger Key |
| 5. Volume Key | 10. Microphone (Sub) |

► Product View



- | | |
|---------------------------------|---------------------------------|
| 11. Flash LED | 16. Pogo Pin for gun grip |
| 12. Rear Camera | 17. Pogo Pin for cradle |
| 13. Speaker | 18. Microphone (Main) |
| 14. Hand Strap Attachment Point | 19. Hand Strap Attachment Point |
| 15. NFC | 20. USB-C Port |

▶ Inserting Micro SD/Nano SIM Card (Phone Ver. Only)

Inserting the Micro SD/Nano SIM Card

1. Pick out the Micro SD/Nano SIM card holder.



2. You may put in 2 SIM cards or put in one SIM card and one SD card at a time.



3. Align the card holder with the slot, and push it in till it reaches the end. (Make sure the cards stay flat while pushing in the card holder)

▶ Install the Battery

1. Align the battery with the battery compartment following the picture below.



2. Press and hold both of the plastic buckles at the bottom, then push against the front.



3. Press down the battery to secure in place.



▶ Remove the battery

1. Press and hold both of the plastic buckles at the bottom.



2. Push the battery against the front and lift to remove.



WARNING!

There is a risk of fire and burns if the battery is handled improperly. DO NOT disassemble, crush, puncture, short external contacts, or dispose the battery pack in fire or water. DO NOT attempt to open or service the battery. Dispose used batteries according to local recycling guidelines in your area.

CAUTION!

To ensure the unit working properly, please keep all connectors away from the contaminants such as dust, grease, mud, and water. Negligence may cause the unit to lose communication, short circuit, or overheated. If the connector is damaged, please ensure the connector is fully repaired before using the unit to avoid short circuiting.

▶ Checking LED Status

LED	Description
Red Light	· Battery Charging
Green Light	· Battery Fully charged · Barcode scan good read
Blue Light	· Message
If scanner app is running, LED is controlled by scanner app. No LED (Red and Green) display when battery is out. (even AC IN)	

▶ Charging the Battery

Before using the terminal for the first time, you need to charge it for about 24 hours. For the regular use, you can charge the terminal for 4 hours to recharge the battery to full capacity.

To charge the terminal, please use the USB charging cable or the cradle. Connect the Type-C USB cable to the USB port on PA768 and the other end of the USB cable connect to AC power Adapter into the electrical outlet on the USB plug. The charging LED indicator on PA768 is turning red in the charging state.

