

HT730

Android Handheld Terminal (38 Keys)



Quick Start Guide

620396G V1.1

► Package

Please make sure the following contents are in the HT730 gift box. If something is missing or damaged, please contact your Unitech representative.

► The Package Contents

- HT730 with bumper (depends on the model you choose; the actual product may not include the bumper.)
- Battery
- Hand Strap
- Quick Start Guide

► Optional Accessories


- USB Type-C Cable
- Terminal Power Adapter
- Glass Screen Protector
- 1-slot Terminal & Battery Charging Cradle + Adapter
- 1-slot Ethernet & Battery Cradle + Adapter
- 1-slot USB & Battery Cradle + Adapter

► Product View



- | | |
|--------------------------------|--------------------------|
| ① Scanner Window | ⑥ Receiver |
| ② 16M Camera & LED Flash Light | ⑦ Pogo pin |
| ③ LED Indicator | ⑧ USB-C Port |
| ④ Scanner Trigger Key | ⑨ Battery Release Latch |
| ⑤ Keypad | ⑩ Battery |
| | ⑪ Strap Attachment Point |

► Keypad View

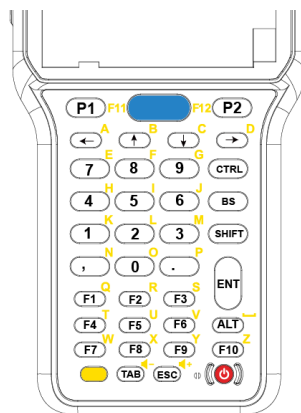

► How to Pull Up the Soft Keypad on the HT730

- When there is a number or text to be entered, pressing the P1 key will pop up the SIP (Soft Input Panel) keyboard on the screen, and when you press the P1 key again, the SIP keyboard will disappear.
- Once you do not want this P1 function, you can open the APP named KeyRemap and tap **PROG_1(296) → Action → UNKNOWN**

► Install the Battery

Align the battery with the battery slot and insert it from the bottom, pressing down firmly. Slide the release latch to the right to lock it.



► Remove the Battery

- 1. Make sure the battery release latch is in the unlocked position.




- 2. Grasp the battery from the two grooves and gently lift it upward.



► Getting Started

Before starting to use the handheld terminal, we would like to suggest you follow the illustrations below to begin to use the terminal.

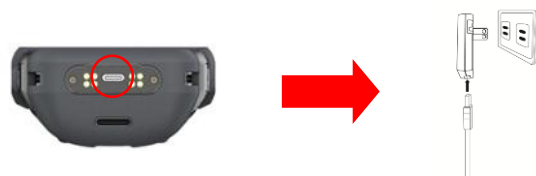


► Checking Battery Status

If the battery power becomes low during normal use, a status icon will appear on the device screen indicating a low or very low battery status. In either case, please back up your data and recharge your device as soon as possible.



► Inserting MicroSD / Micro SIM Card

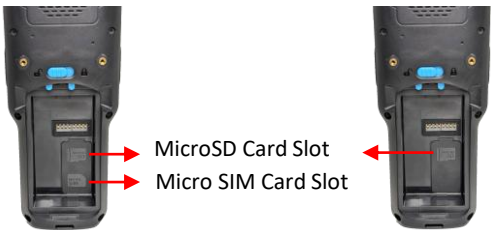

(5G Ver.)

(Wi-Fi Only Ver.)

MicroSD Card Slot

Push up the MicroSD card holder to unlock, lift to insert the MicroSD card, then push down to lock it securely. Ensure proper installation.



Unlock



Lock

Micro SIM Card Slot (5G Ver. Only)

Push down the SIM card holder to unlock, lift to insert the SIM card, then push up to lock securely. Ensure proper installation.



Unlock



Lock

► Checking LED Status

Terminal	LED	Description
	Red Light	■ Battery Charging
		■ Twinkling together to indicate battery low status (less than 15%) when power on.
		■ Twinkling alternate to indicate battery is not installed or not installed well when battery charger was plug-in.
	Green Light	■ Battery Fully charged
	Blue Light	■ Barcode scan good read
No LED (Red and Green) display when battery is out.		

WARNING!

There is a risk of fire and burns if the battery is handled improperly. **DO NOT** disassemble, crush, puncture, short external contacts, or dispose the battery pack in fire or water. **DO NOT** attempt to open or service the battery. Dispose used batteries according to local recycling guidelines in your area.

CAUTION!

To ensure the unit working properly, please keep all connectors away from the contaminants such as dust, grease, mud, and water. Negligence may cause the unit to lose communication, short circuit, or overheated. If the connector is damaged, please ensure the connector is fully repaired before using the unit to avoid short circuit.

DO charge between 20% and 80% to protect your battery.
Avoid full discharges (<0%) or charging all the time (always 100%) to reduce stress on the battery.